KAISAI ERROR CODES

When the indoor unit encounters a recognized error, the operation lamp will flash in a corresponding series, the lamp may turn on or begin flashing, and an error code will be displayed. These error codes are described in the tables:

Operation Lamp	Timer Lamp	Display	Error Information			
1 time	OFF	EO	Indoor unit EEPROM parameter error			
2 times	OFF	El	Indoor / outdoor unit communication error			
3 times	OFF	ES.	Zero-crossing signal detection error(for some models)			
4 times	OFF	E3	The indoor fan speed is operating outside of the normal range			
5 times	OFF	EЧ	Indoor room temperature sensor T1 is in open circuit or has short circuited			
6 times	OFF	ES	Evaporator coil temperature sensor T2 is in open circuit or has short circuited			
9 times	OFF	EJ/EHOP	Indoor PCB / Display board communication error(for some models)			
7 times	OFF	EC	Refrigerant leak detected			
1 times	ON	FO	Current overload protection			
2 times	ON	FI	Outdoor room temperature sensor T4 is in open circuit or has short circuited			
3 times	ON	Fē	Condenser coil temperature sensor T3 is in open circuit or has short circuited			
4 times	ON	F3	Compressor discharge temperature sensor TP is in open circuit or has short circuited			
7 times	ON	F6	Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited(for free-match indoor units)			
5 times	ON	F4	Outdoor unit EEPROM parameter error			
6 times	ON	FS	The outdoor fan speed is operating outside of the normal range(for some models)			
1 times	FLASH	PO	IPM malfunction or IGBT over-strong current protection			
2 times	FLASH	Pl	Over voltage or over low voltage protection			
3 times	FLASH	P∂	High temperature protection of IPM module or High pressure protection			
5 times	FLASH	РЧ	Inverter compressor drive error			
7 times	FLASH	P6	Low pressure protection(for some models)			
6 times	FLASH	PS/	Indoor units mode conflict(match with multi outdoor unit)			

For other errors:

The display board may show a garbled code or a code undefined by the service manual. Ensure that this code is temperature reading.

Troubleshooting:

Test the unit using the remote control. If the unit does not respond to the remote, the indoor PCB requires replacement.

For some models

Operation Lamp	Timer Lamp	LED Display	Error Information	So
1 time	OFF	EH 00	Indoor unit EEPROM parameter error	
2 times	OFF	EL OI	Indoor / outdoor unit communication error	
3 times	OFF	EH OS	Zero-crossing signal detection error(for some models)	
4 times	OFF	EH 03	The indoor fan speed is operating outside of the normal range	
5 times	OFF	EC SI	Outdoor unit EEPROM parameter error(for some models)	
5 times	OFF	EC S2	Condenser coil temperature sensor T3 is in open circuit or has short circuited	
5 times	OFF	EC 53	Outdoor room temperature sensor T4 is in open circuit or has short circuited	
5 times	OFF	EC 54	Compressor discharge temperature sensor TP is in open circuit or has short circuited	
5 times	OFF	EC 56	Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited(for free-match indoor units)	
6 times	OFF	EH 60	Indoor room temperature sensor T1 is in open circuit or has short circuited	
6 times	OFF	EH 61	Evaporator coil temperature sensor T2 is in open circuit or has short circuited	
12 times	OFF	EC 01	The outdoor fan speed is operating outside of the normal range(for some models)	
9 times	OFF	ЕНОР	Indoor PCB / Display board communication error(for some models)	
8 times	OFF	EP OC	Refrigerant leak detected	
7 times	FLASH	PC 00	IPM malfunction or IGBT over-strong current protection	
2 times	FLASH	PC 01	Over voltage or over low voltage protection	
3 times	FLASH	PC 02	High temperature protection of IPM module or High pressure protection	
5 times	FLASH	PC 04	Inverter compressor drive error	
1 time	FLASH	PC 08	Current overload protection(for some models)	
7 times	FLASH	PC 03	Low pressure protection(for some models)	
1 times	ON		Indoor units mode conflict(match with multi outdoor unit)	